


CK

機図

図面来歴	
記号	内容

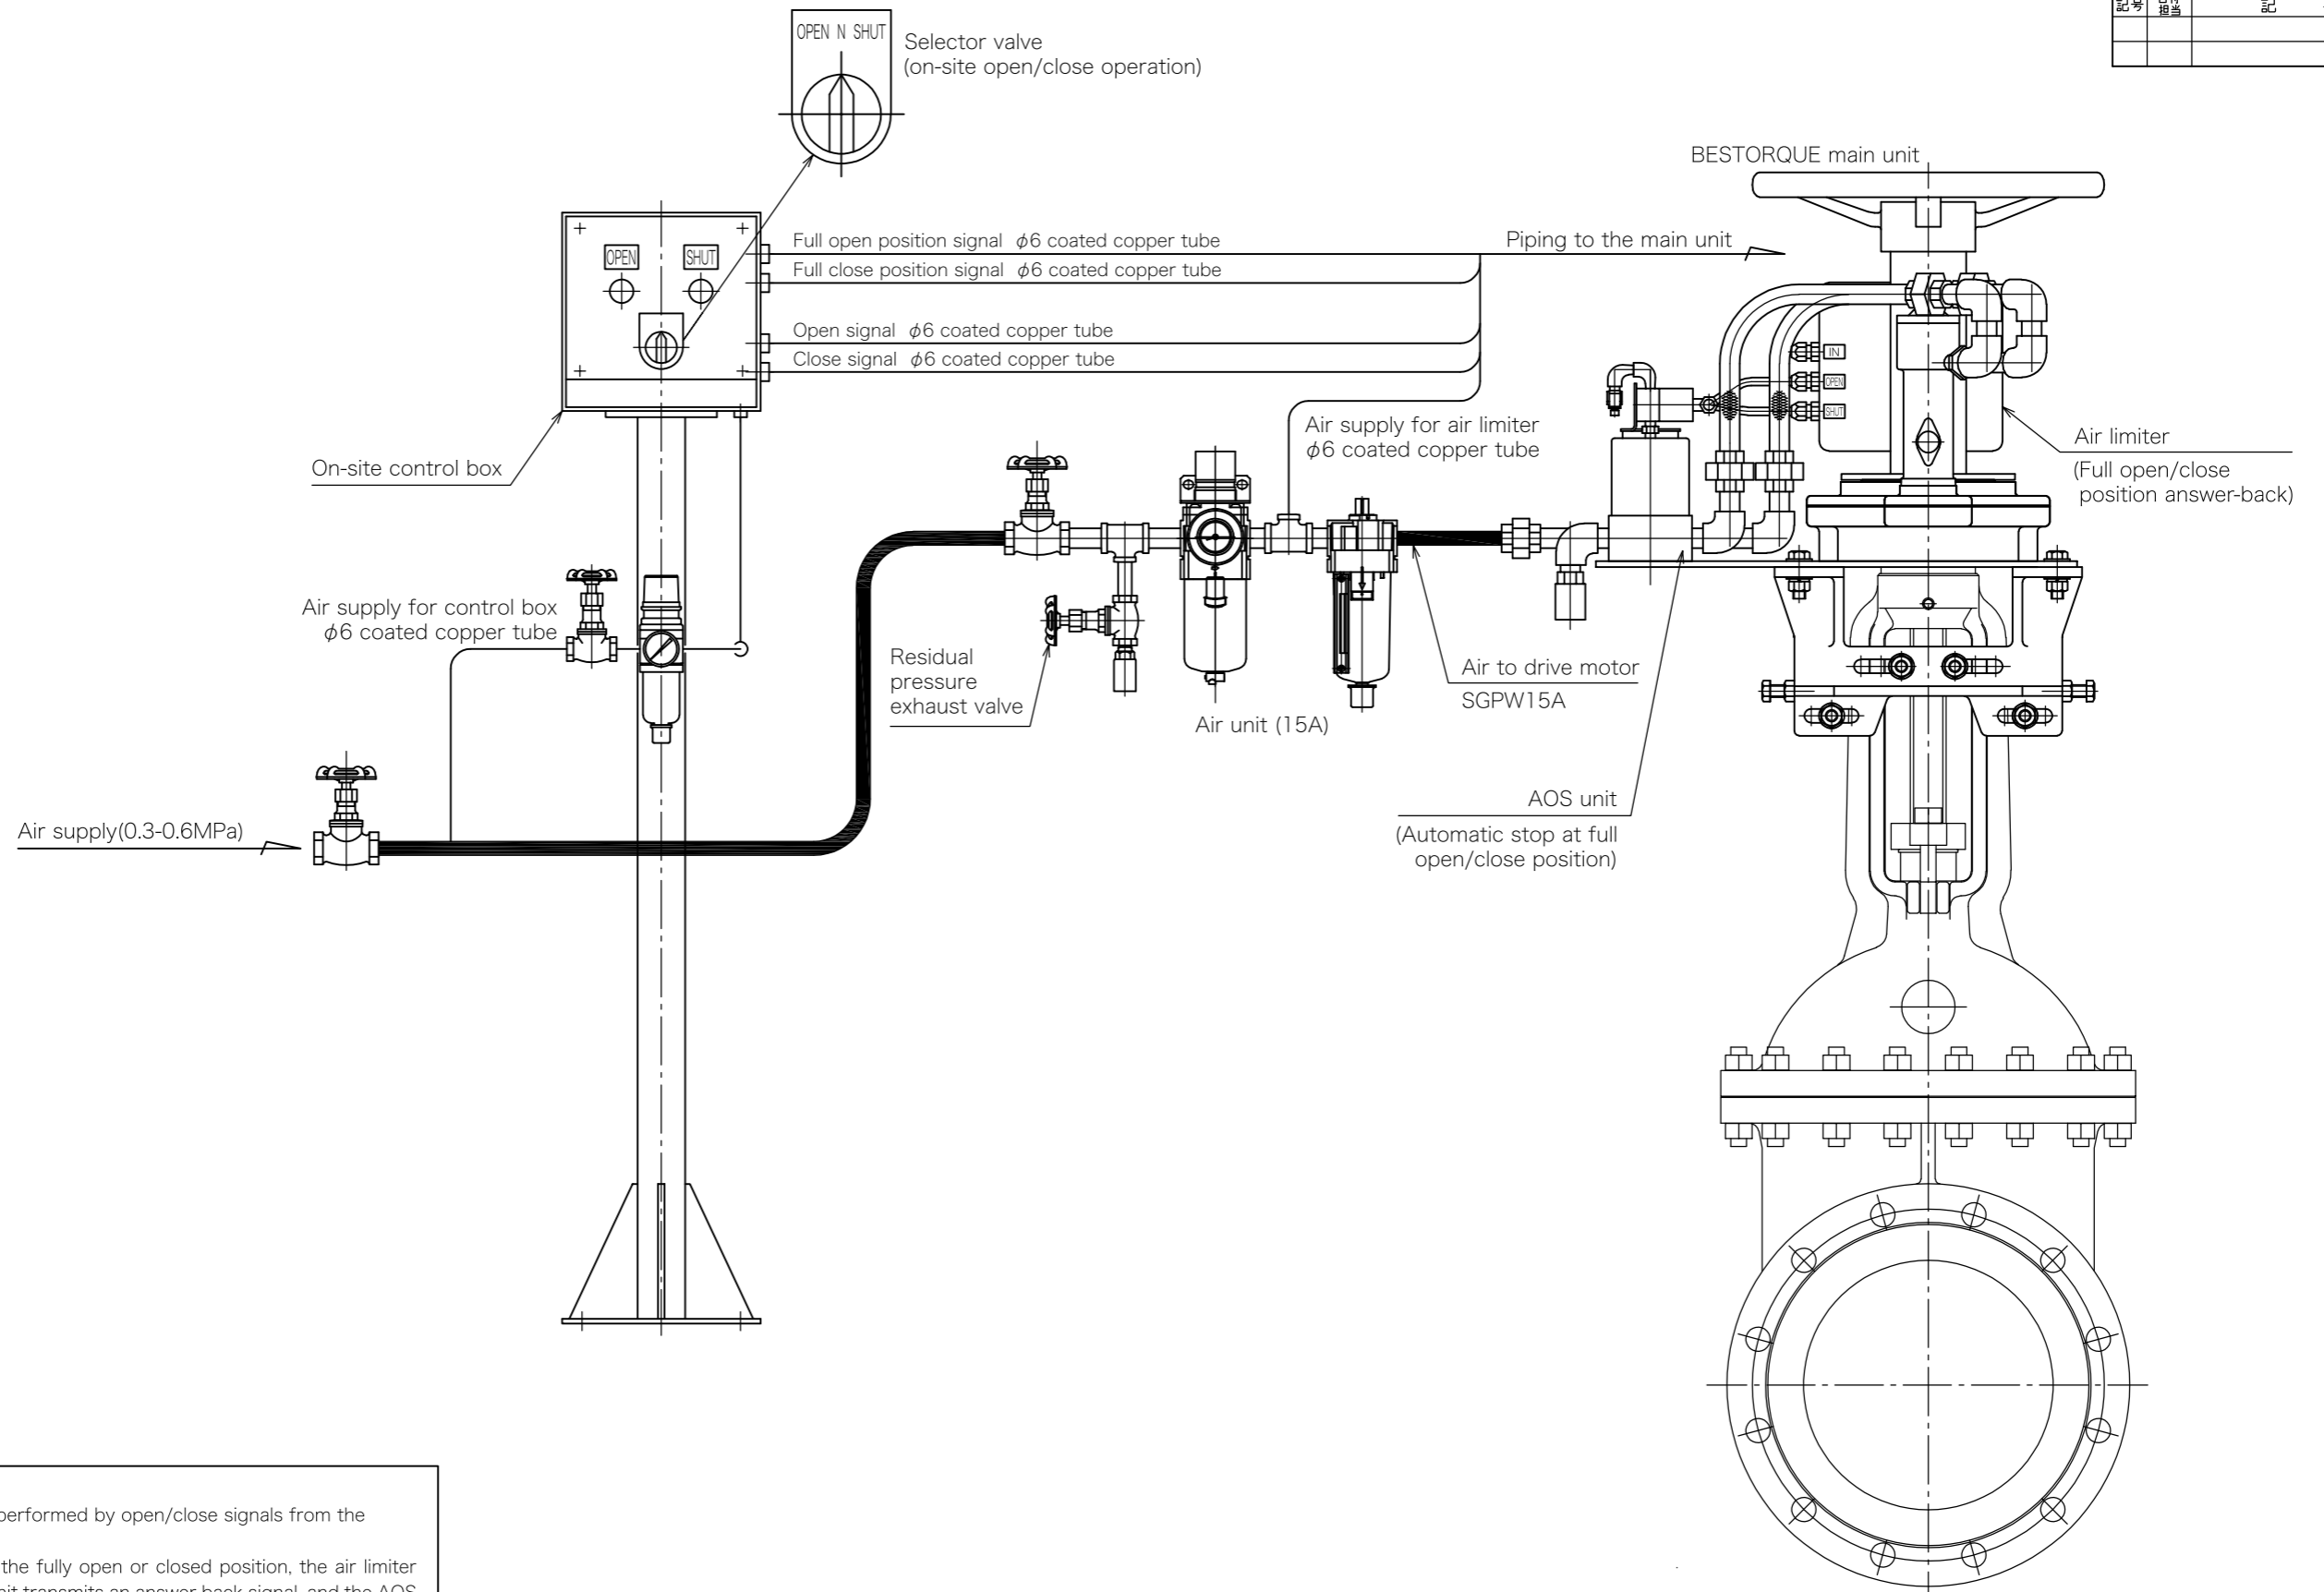

Operational procedure

- 1) Open/close operation is performed by open/close signals from the control box.
- 2) When the valve reaches the fully open or closed position, the air limiter built in Bestorque main unit transmits an answer-back signal, and the AOS unit installed on the actuator automatically stops the actuator.
- 3) Simultaneously, the air lamp indicator for full open/close position on the control box turns on.

TYPE B-1 for on-site operation

機名 図名	ベストルク 接続参考図	承認 杉岡	照査 杉岡	担当 上田	作成 上田	20.11.11	20.11.11
	外番 図番			尺度	部番		

CK