


図面来歴	
記号	内容
	記事

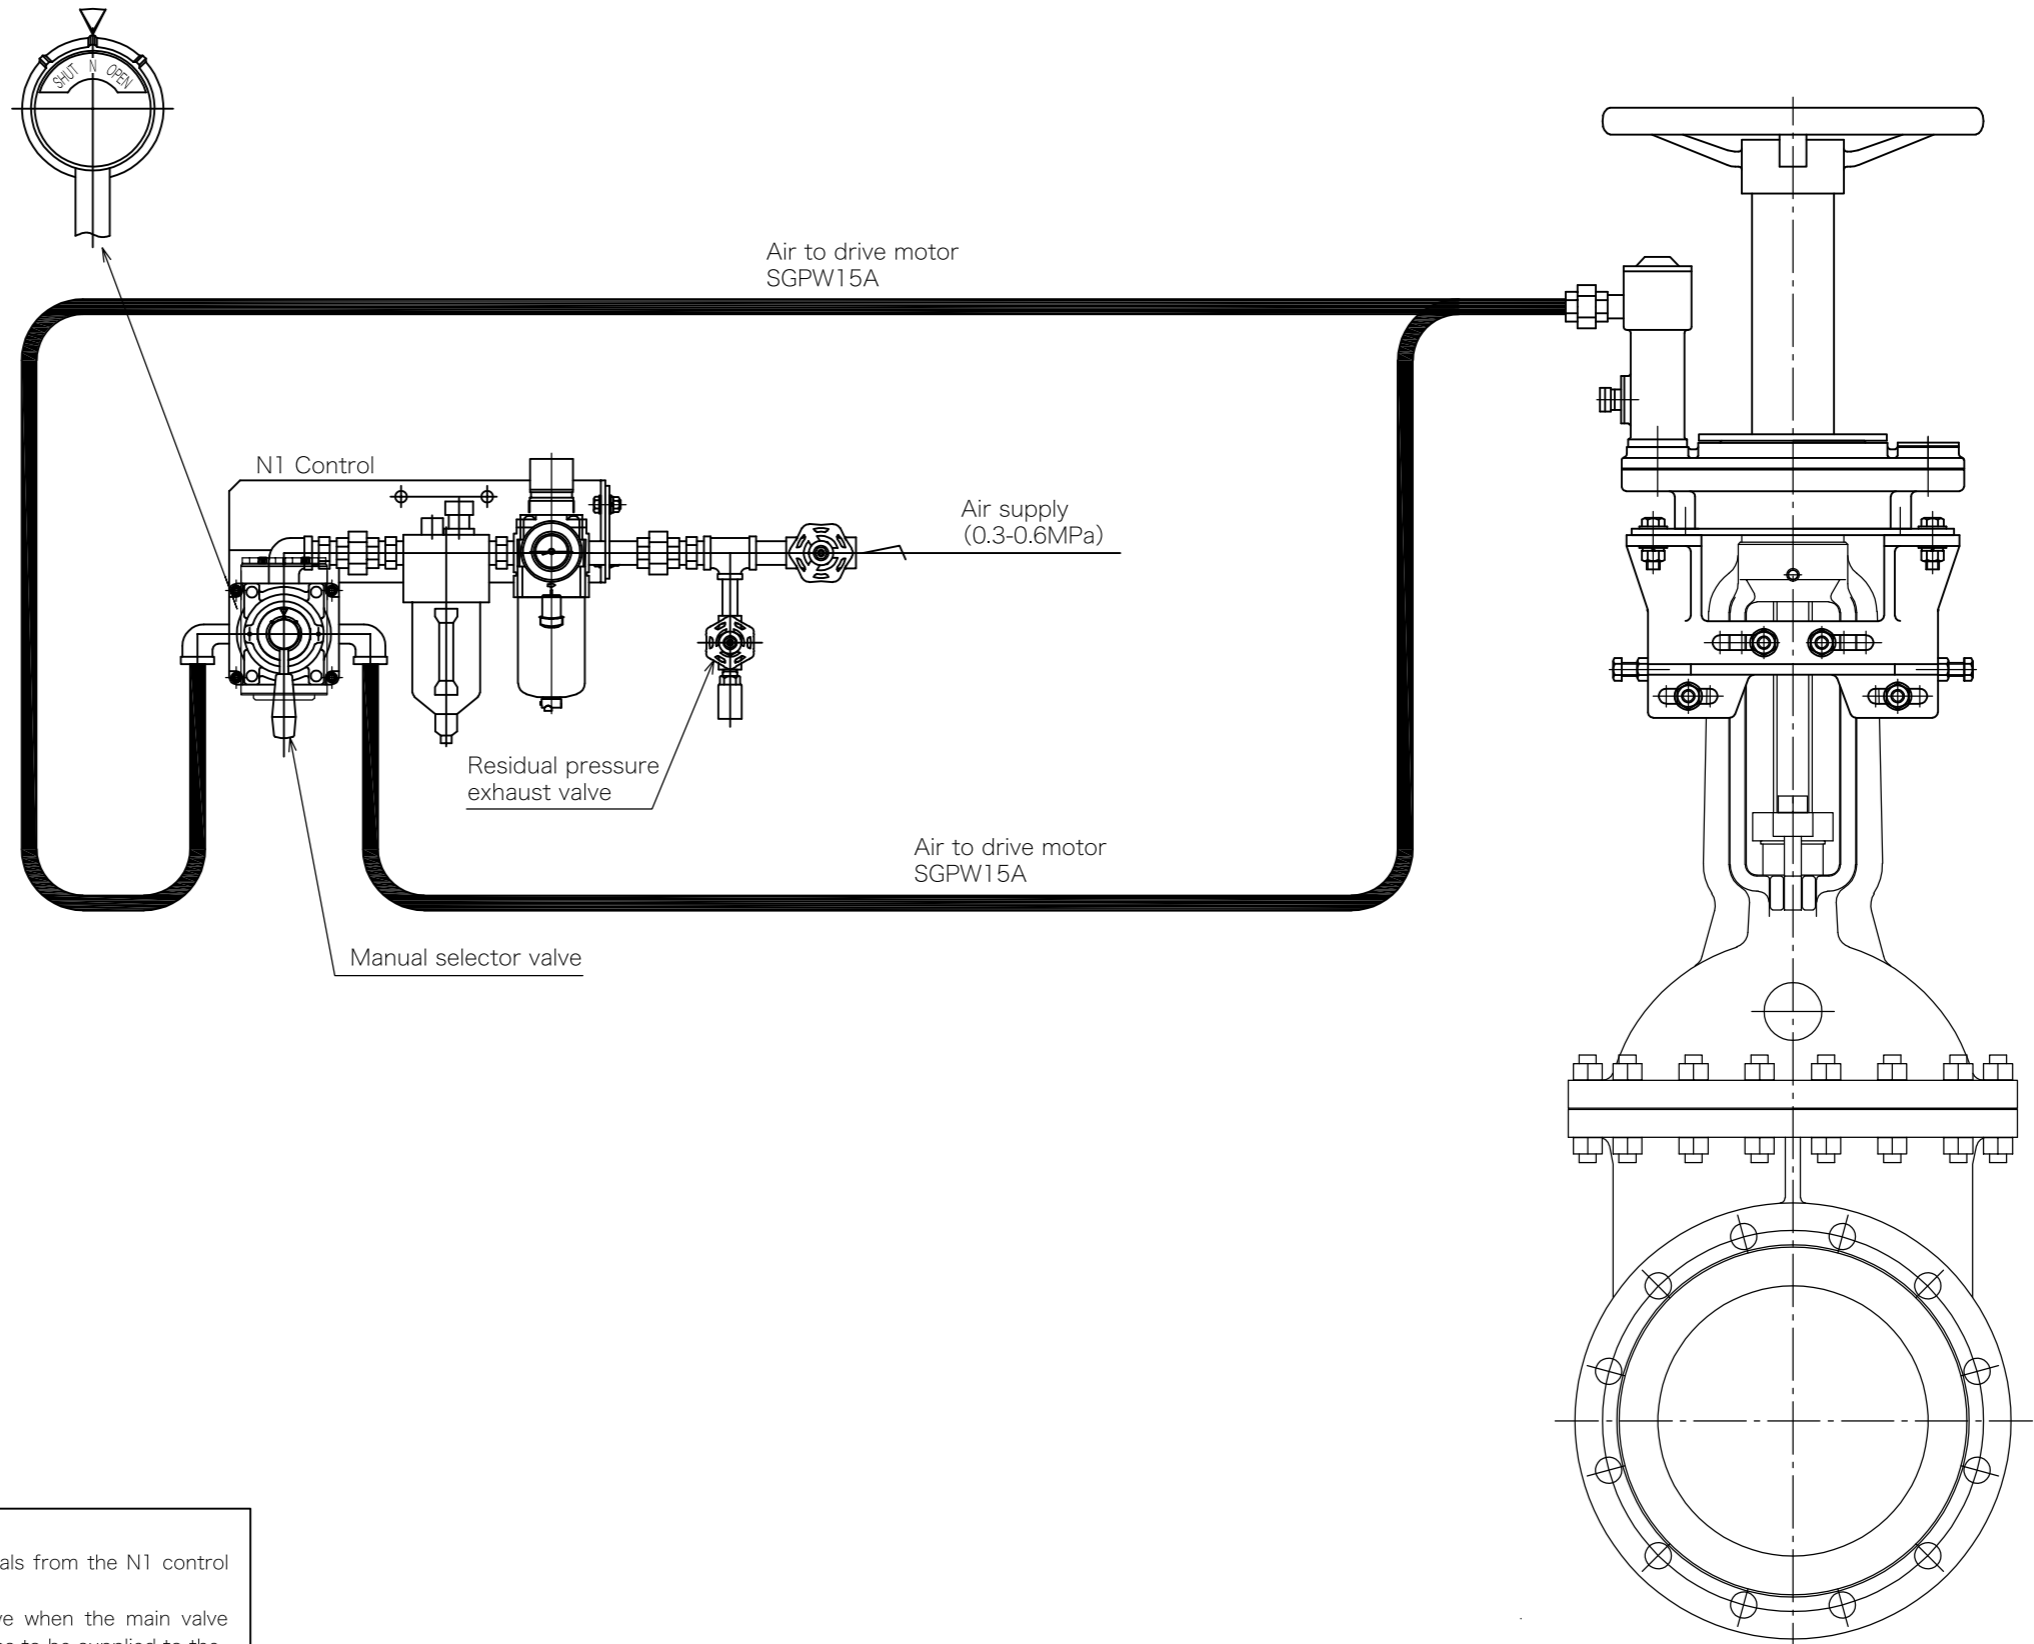

Operational procedure  
 1) Open/close operation is performed by open/close signals from the N1 control manual selector valve.  
 2) Be sure to completely close the manual selector valve when the main valve reaches the fully open or closed position, as air continues to be supplied to the air motor while the manual selector valve is being operated.

TYPE A-1 for on-site operation

機名 図名	ベストルク 接続参考図	承認	20.11.11 杉岡	照査	20.11.11 杉岡	担当	20.11.11 上田	作成	20.11.11 上田
		外番 図番				尺度		部番	

CK