


CK

機図

図面来歴	
記号	内容

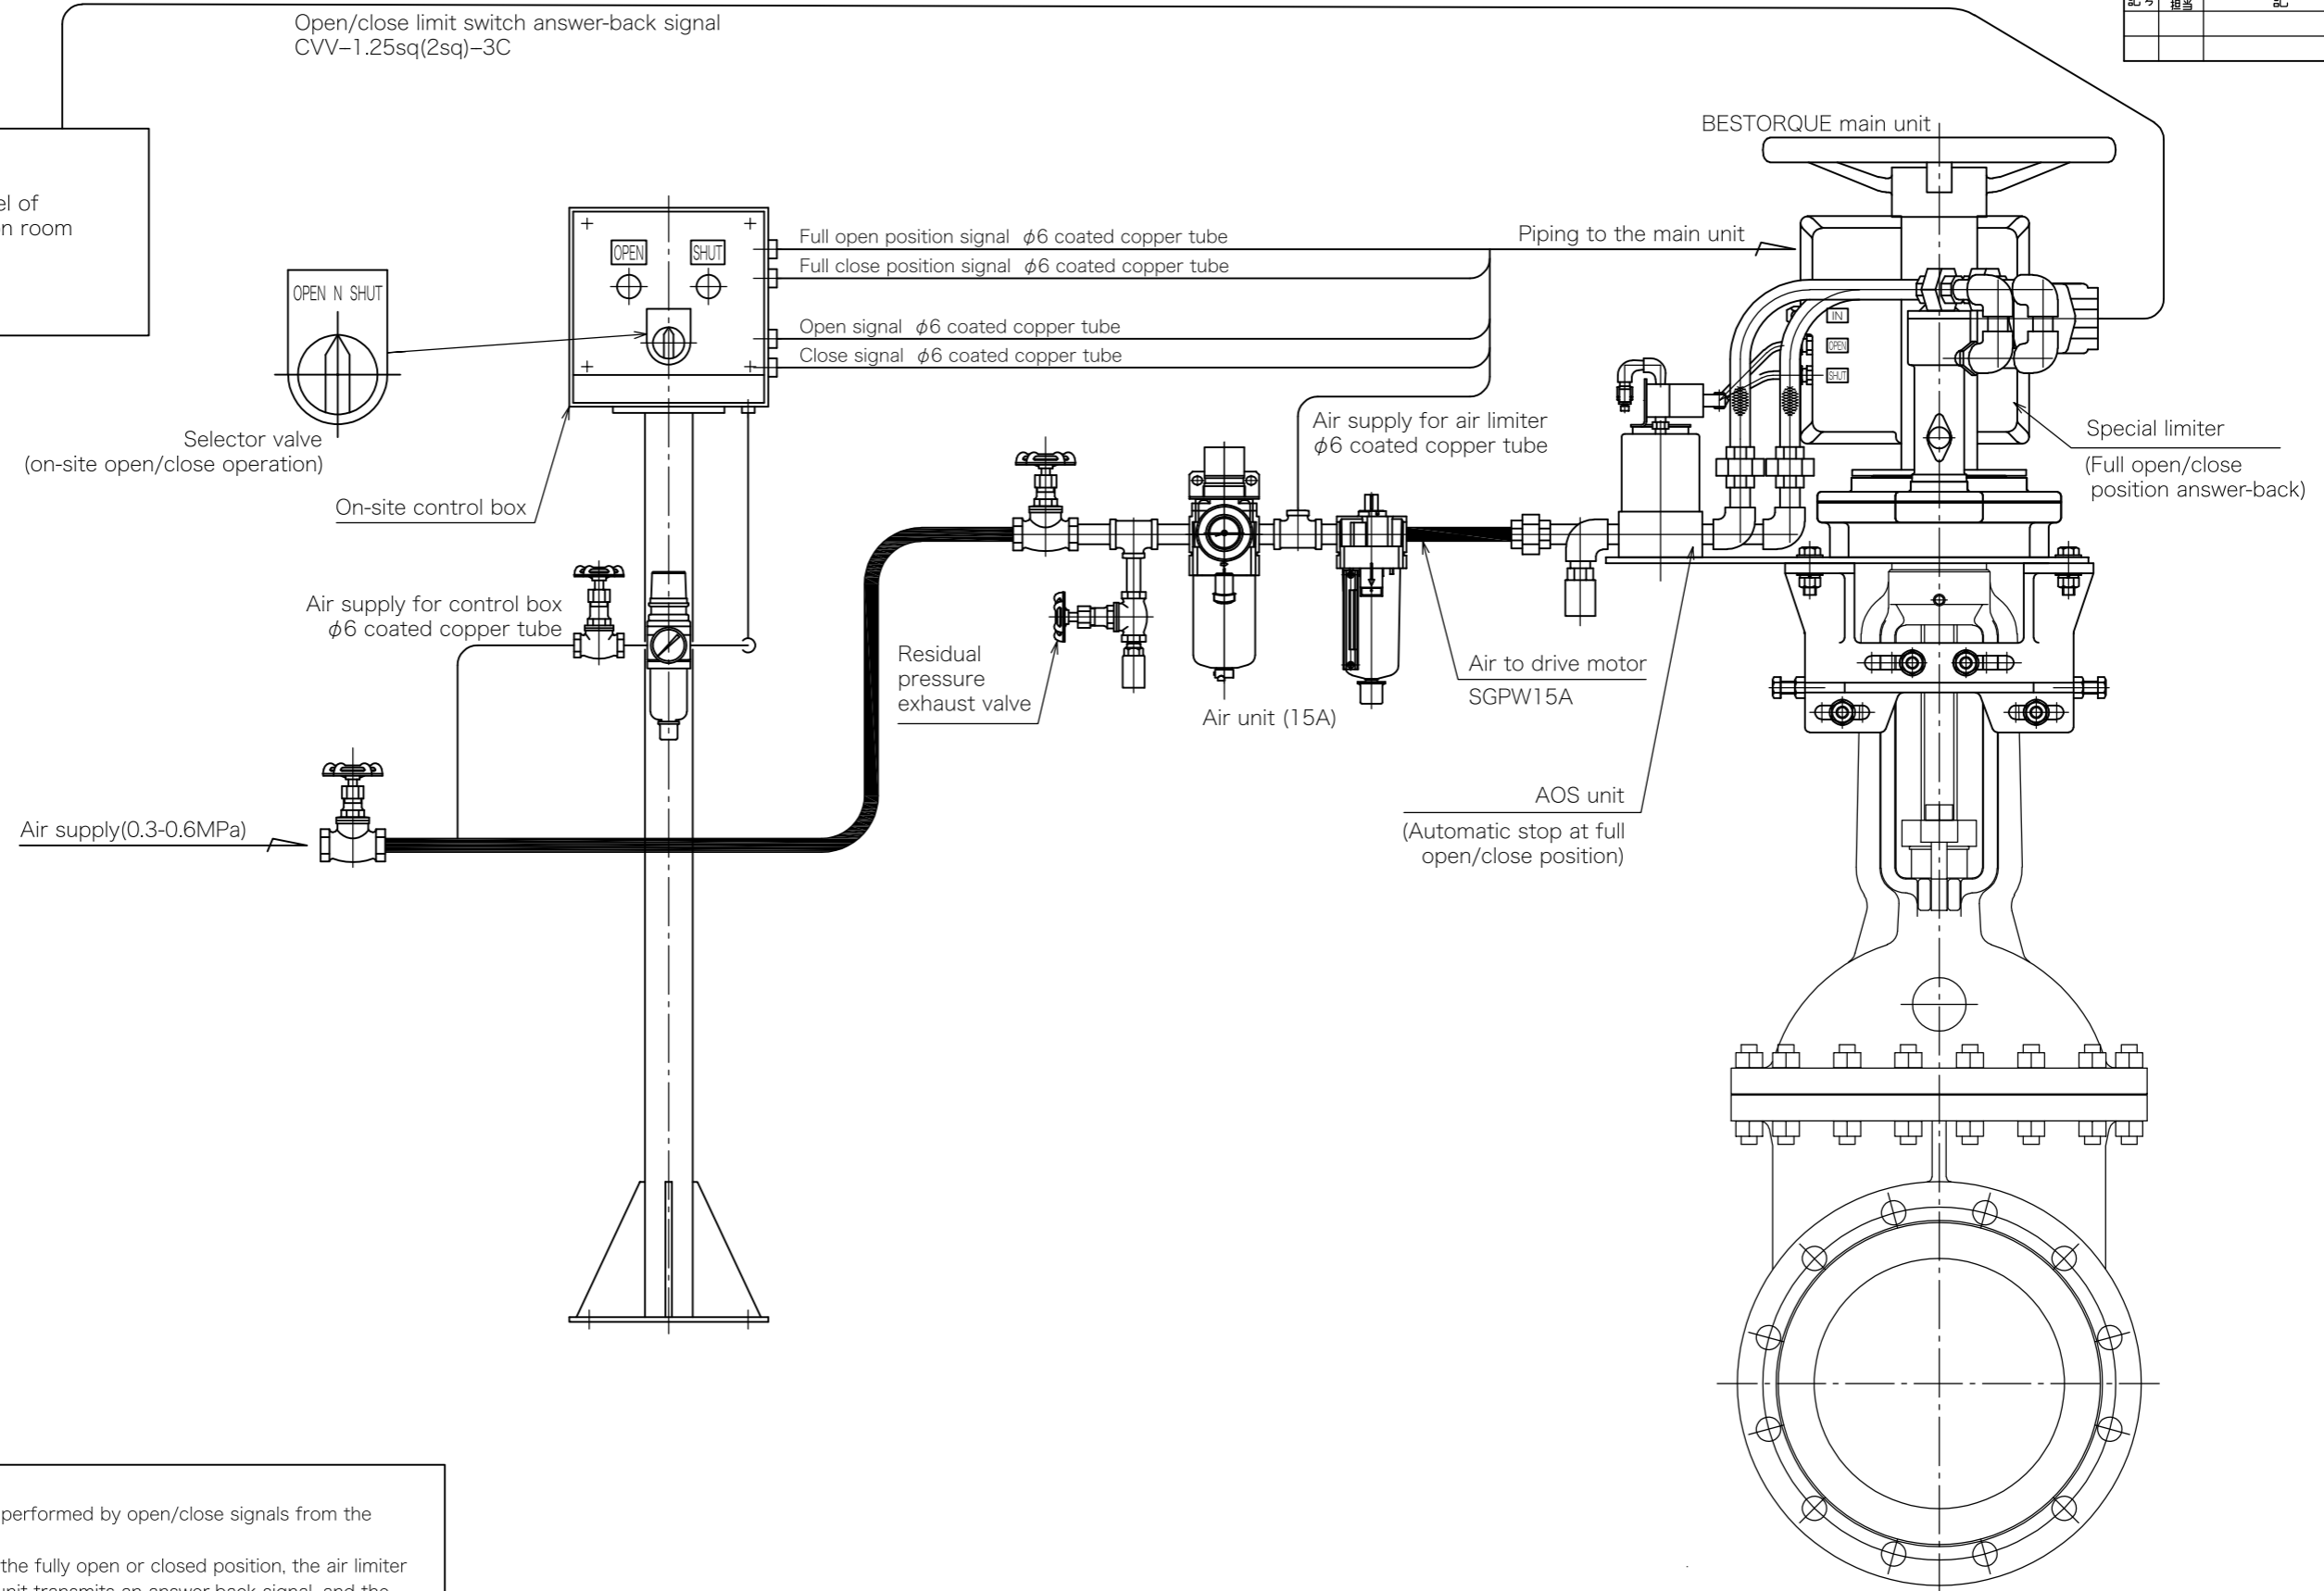

Operational procedure

- 1) Open/close operation is performed by open/close signals from the control box.
- 2) When the valve reaches the fully open or closed position, the air limiter built in Bestorque main unit transmits an answer-back signal, and the AOS unit installed on the actuator automatically stops the actuator.
- 3) Simultaneously, the air lamp indicator for full open/close position on the control box turns on.
- 4) The electric limiter built in the actuator also sends a full open/close position answer-back signal to the central operation room.

# TYPE B-2 for on-site operation

機名 図名	ベストルク 接続参考図	外番 図番	承認	20.11.11	照査	20.11.11	担当	20.11.11	作成	20.11.11
			鋼鉄工業 株式会社	杉岡	杉岡	上田	上田			
		尺度			部番					
					CK					